

Ediabas v7.7.x settings for ICOM Next, ENET, DCAN...


Table of Contents:

Ediabas configuration	1
Reserve ICOM Next with ICOM_Search	1
ENET IFH with ENET-Cable for F-Series and newer, as example for INPA64, Tool64	2
ENET IFH with ICOM Next for F-Series and newer, as example for INPA64, Tool64	3
RPLUS:ICOM_P IFH (DCAN) with ICOM Next for E-Series, as example for INPA, Tool32, NCS	4
RPLUS:MOST_ASYNC_ab625 IFH (MOST) with ICOM Next + ICOM-B for E-Series for WinKFP	5
RPLUS:MOST_CTRL_ab625 IFH (MOST) with ICOM Next + ICOM-B for E-Series for WinKFP	6
STD:OBD IFH with DCAN-USB Cable for E-Series, as example for INPA, Tool32, NCS	7



Ediabas configuration

Change Ediabas configuration only with included „ECC - Ediabas Configuration Center“, don't use old EasyConnect, it destroy ediabas.ini

Reserve ICOM Next with ICOM_Search


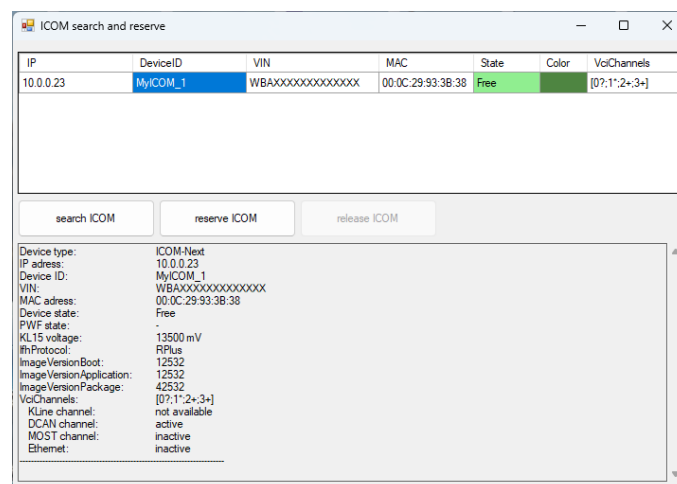


ENET IFH with ENET-Cable for F-Series and newer, as example for INPA64, Tool64 ...

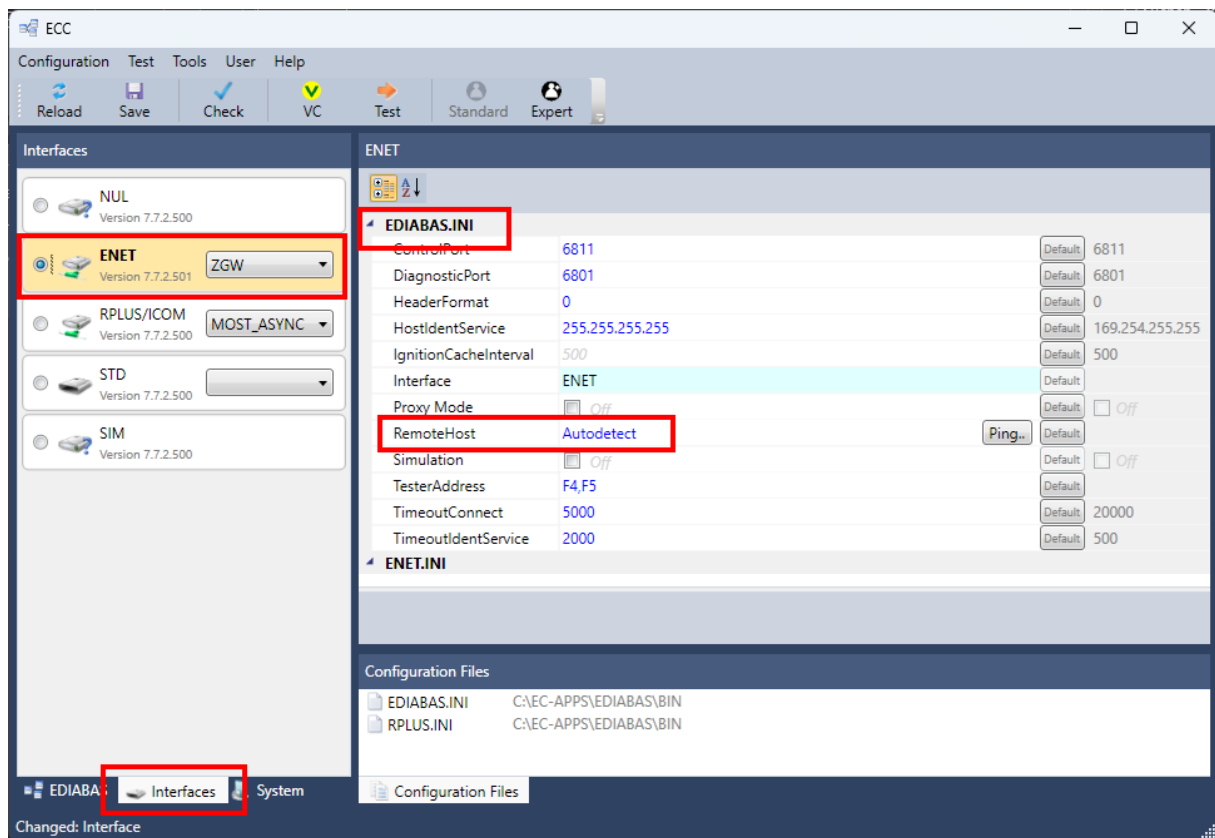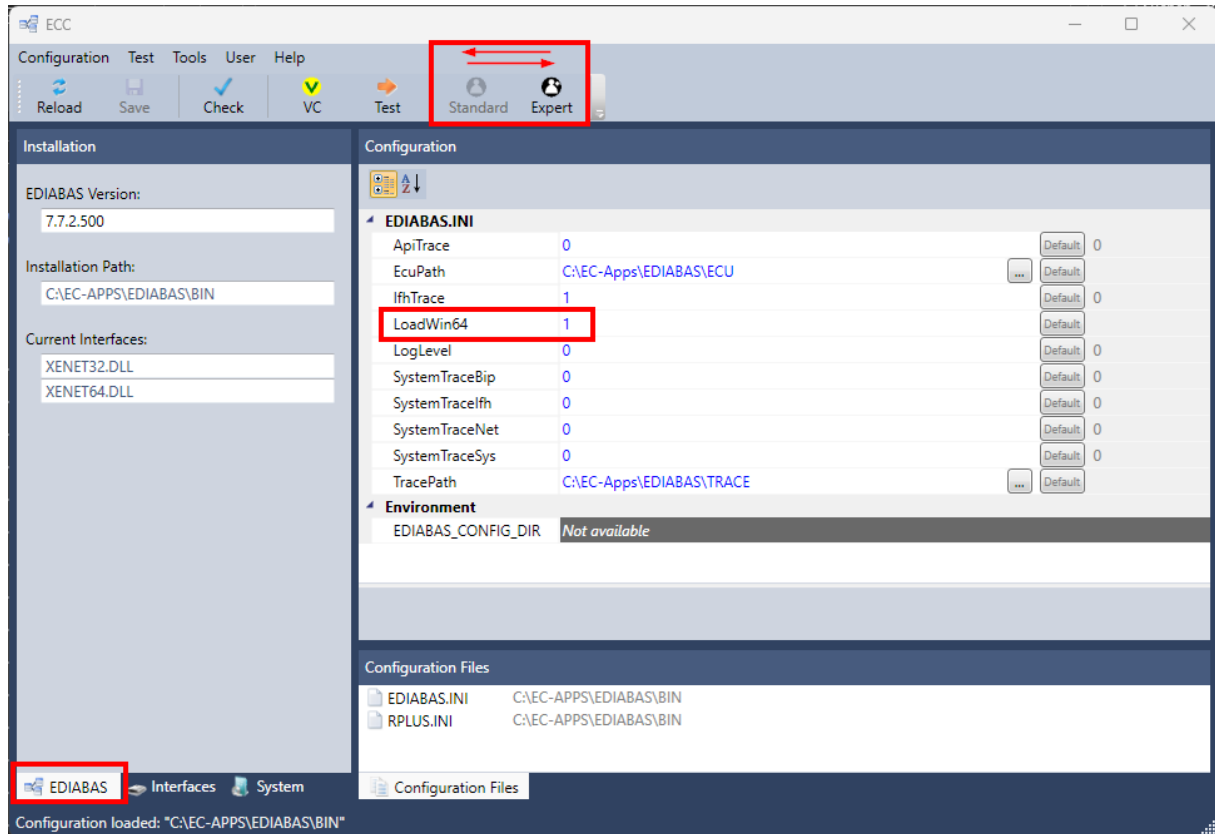



ENET IFH with ICOM Next for F-Series and newer, as example for INPA64, Tool64 ...

1. Reserve ICOM, look to first page
2. If need change Remotehost = „Autodetect“ to IP from your ICOM

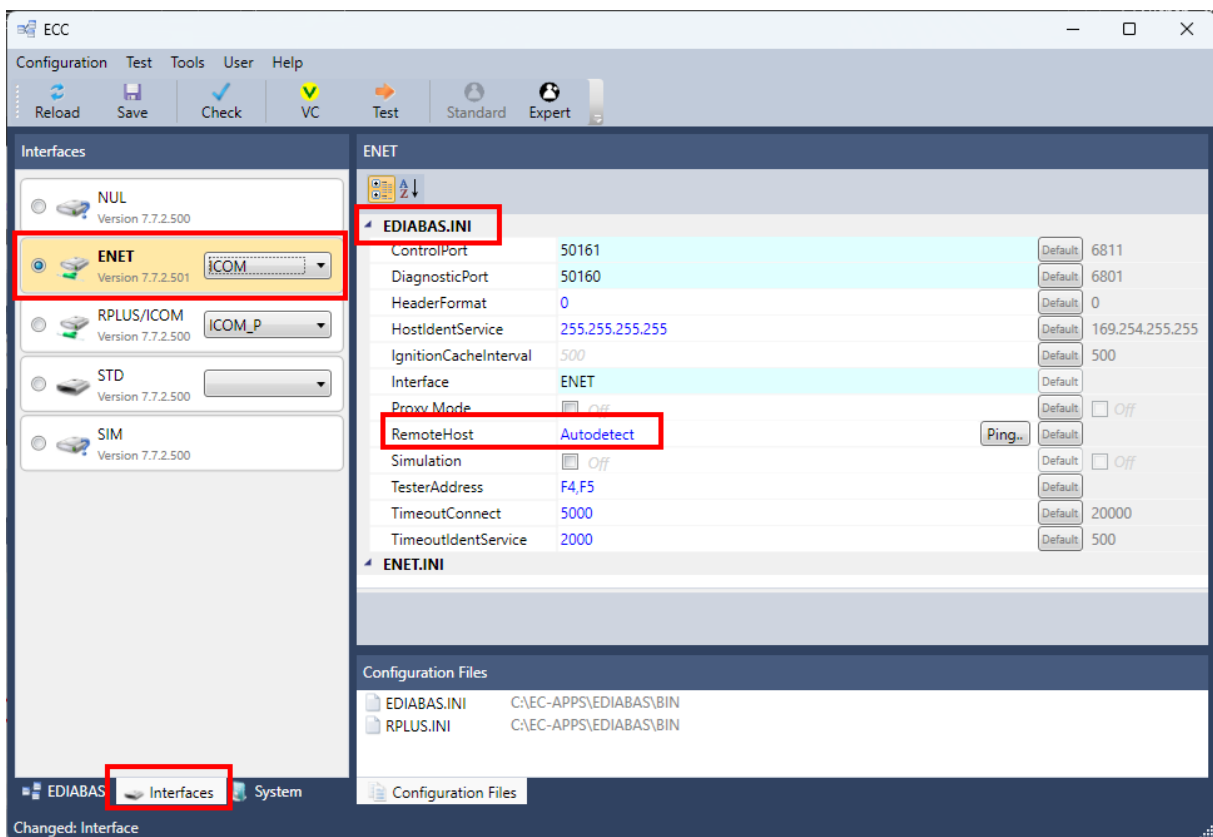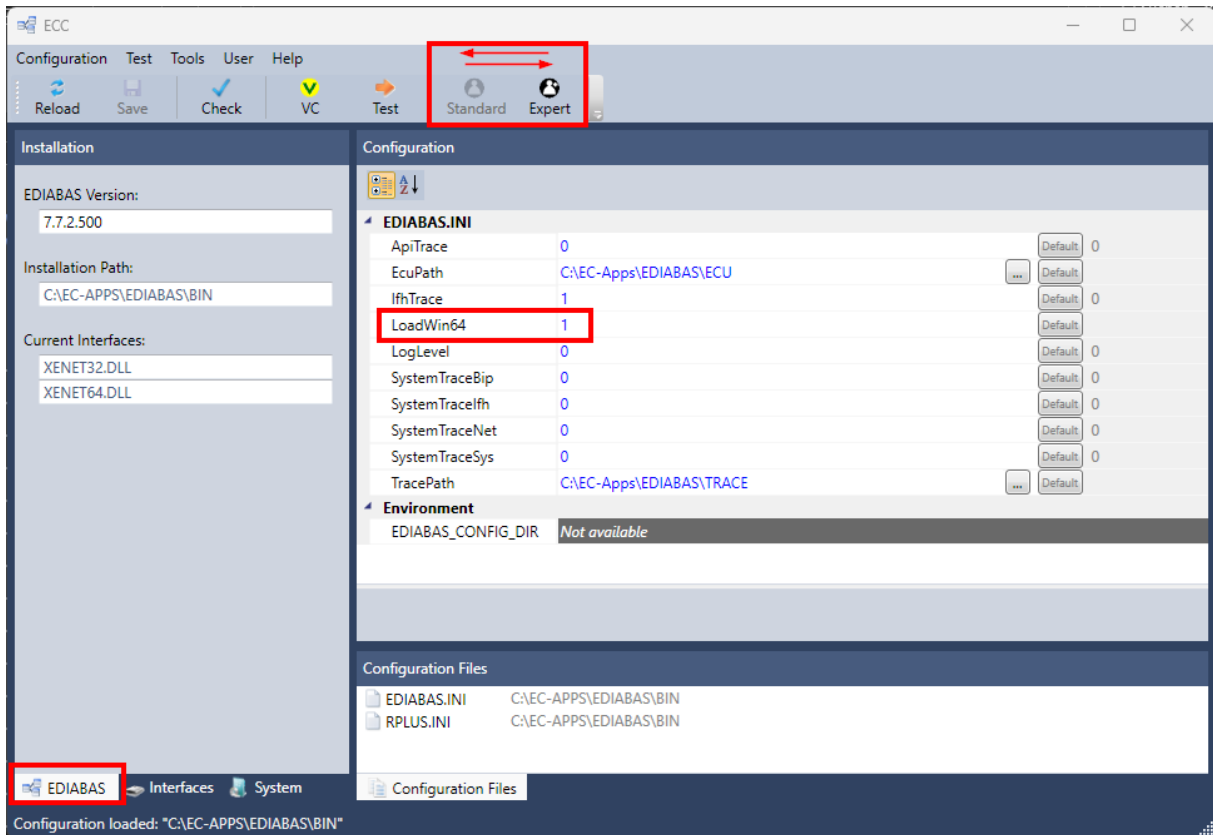



RPLUS:ICOM_P IFH (DCAN) with ICOM Next for E-Series, as example for INPA, Tool32, NCS ...

1. Reserve ICOM, look to first page
2. Change Remotehost = „YOUR_ICOM_IP“ to IP from your ICOM

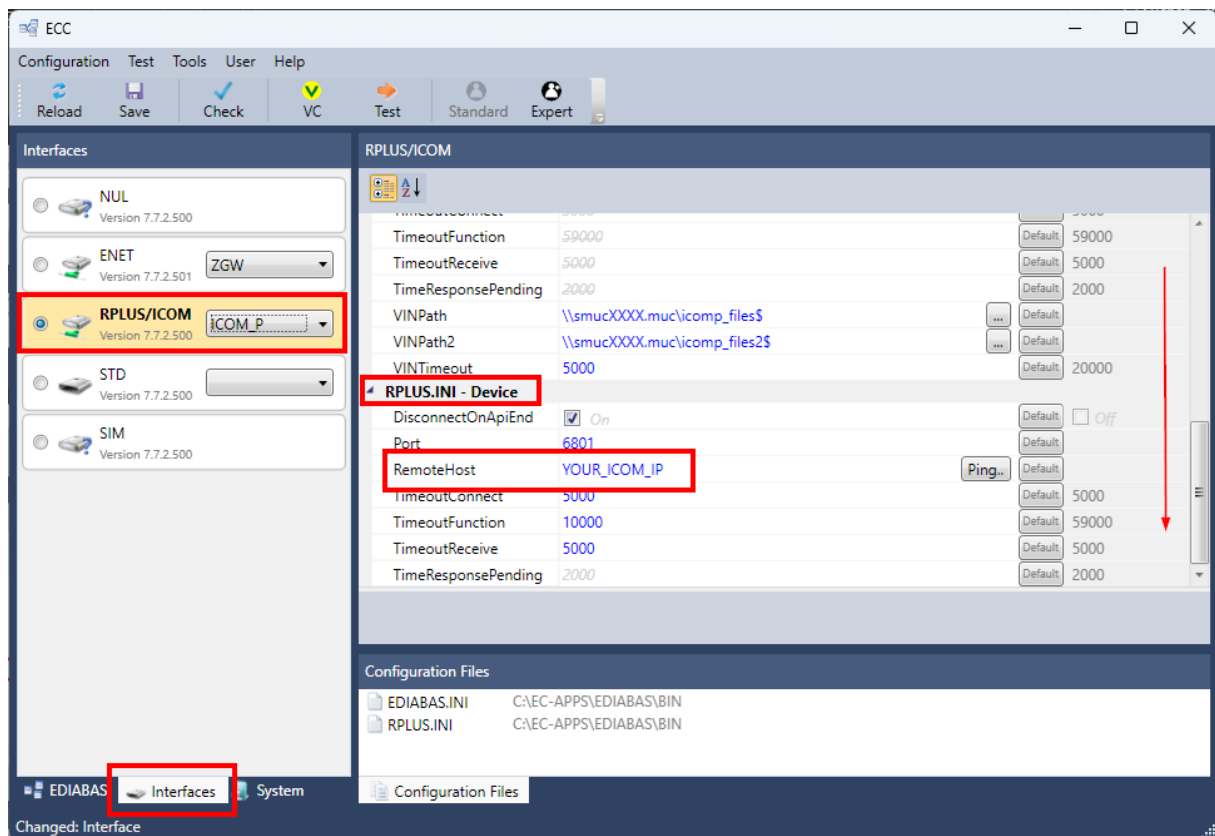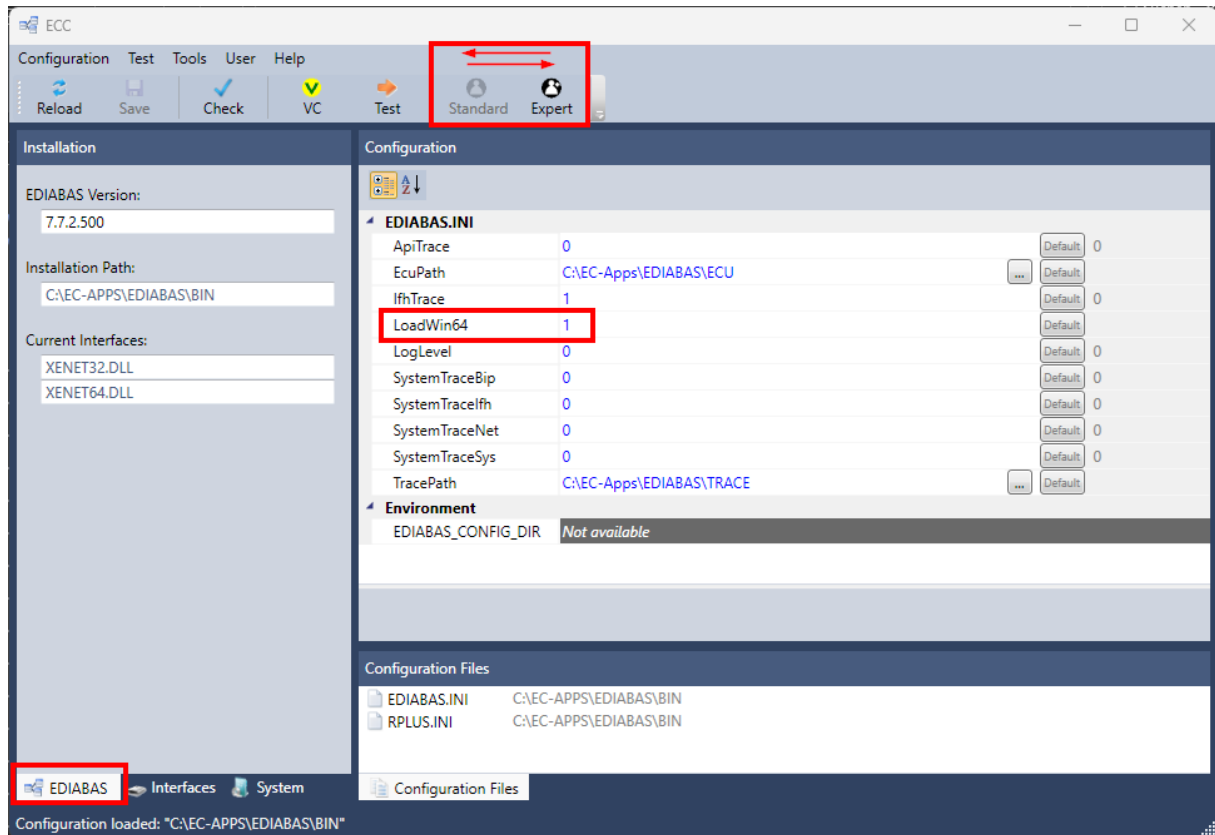



RPLUS:MOST_ASYNC_ab625 IFH (MOST) with ICOM Next + ICOM-B for E-Series for WinKFP

1. Reserve ICOM, look to first page
2. Change Remotehost = „YOUR_ICOM_IP“ to IP from your ICOM

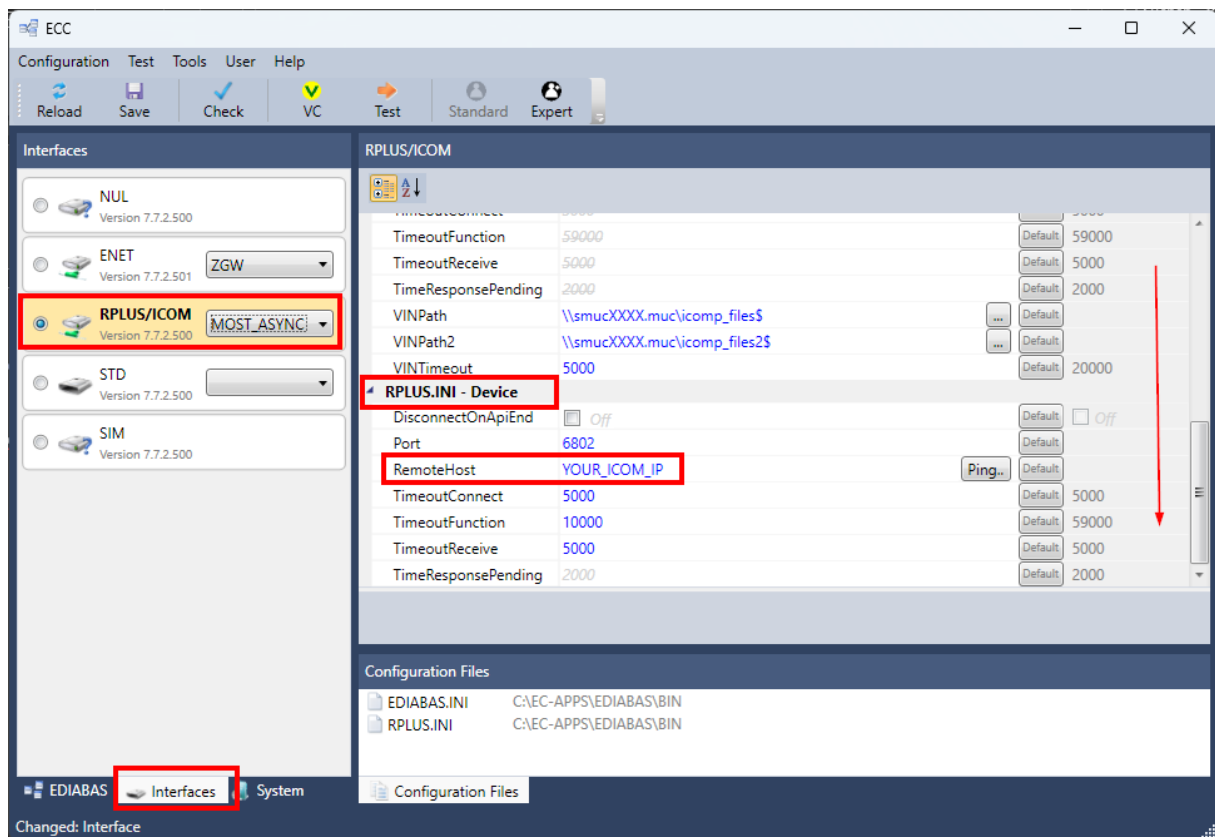
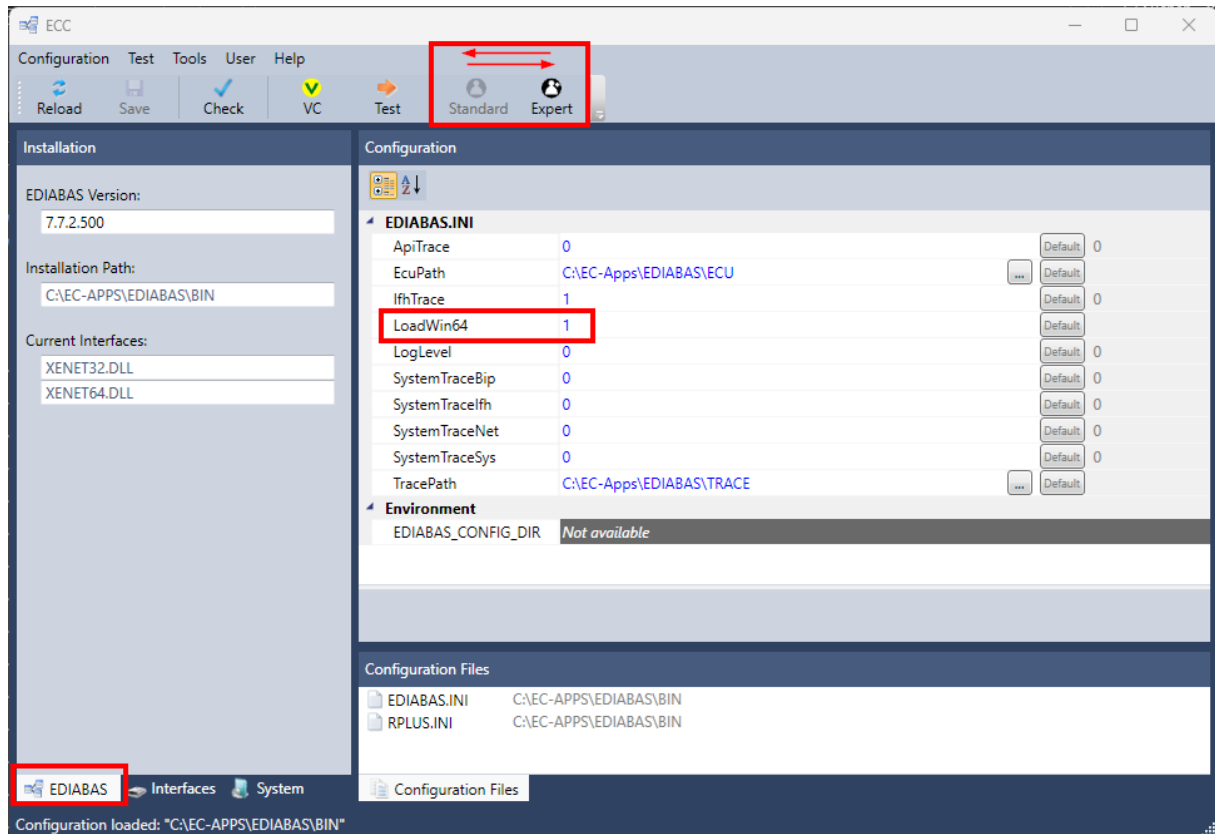


RPLUS:MOST_CTRL_ab625 IFH (MOST) with ICOM Next + ICOM-B for E-Series for WinKFP


1. Reserve ICOM, look to first page
2. Change Remotehost = „YOUR_ICOM_IP“ to IP from your ICOM

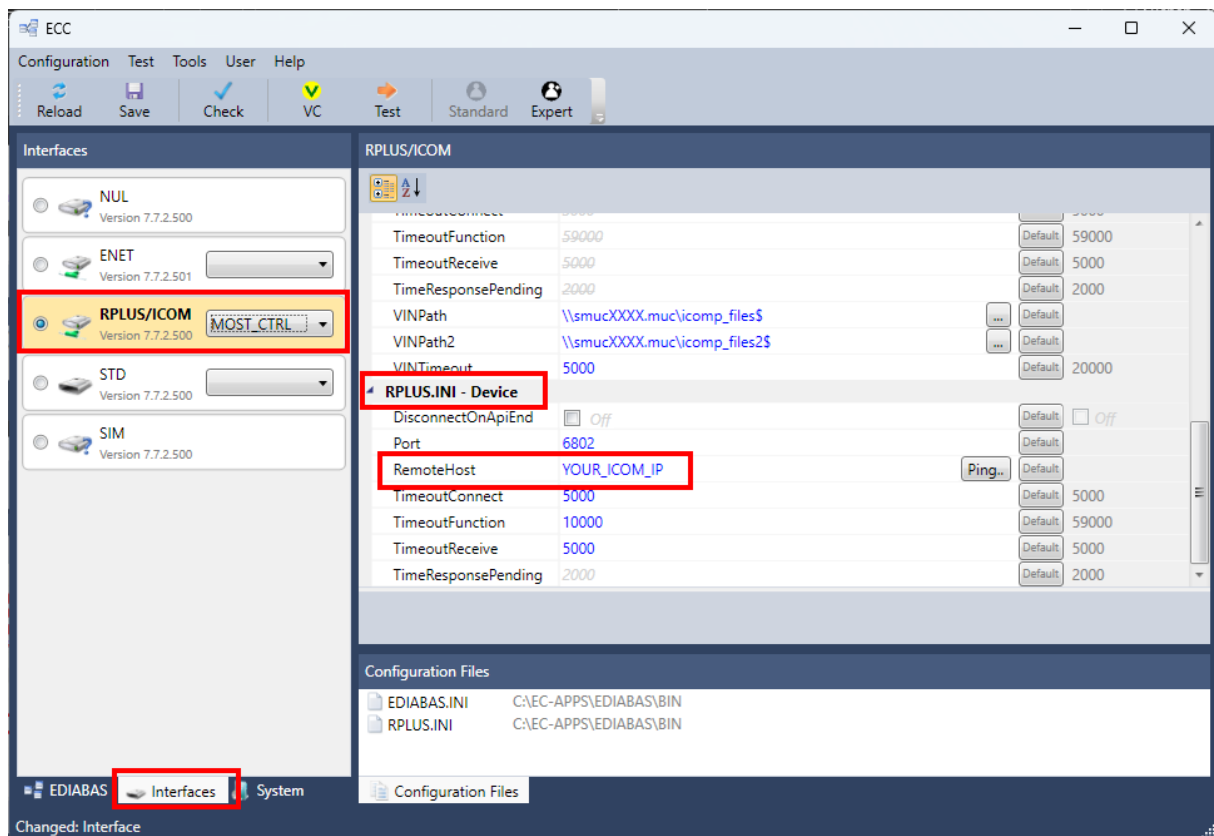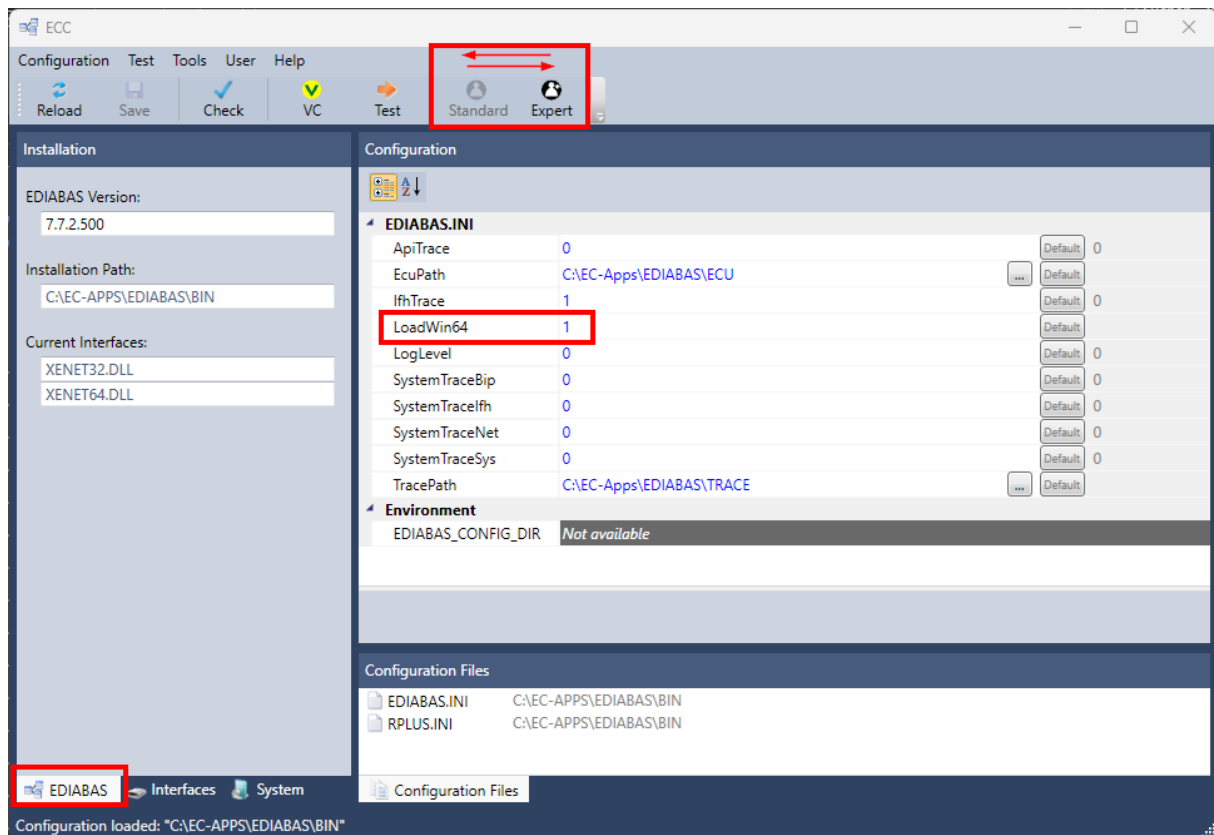

STD:OBD IFH with DCAN-USB Cable for E-Series, as example for INPA, Tool32, NCS ...

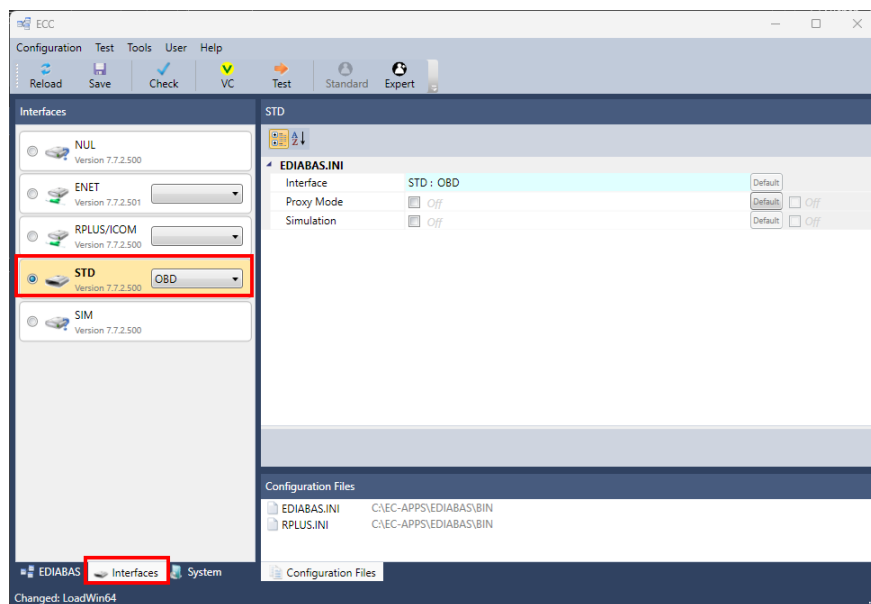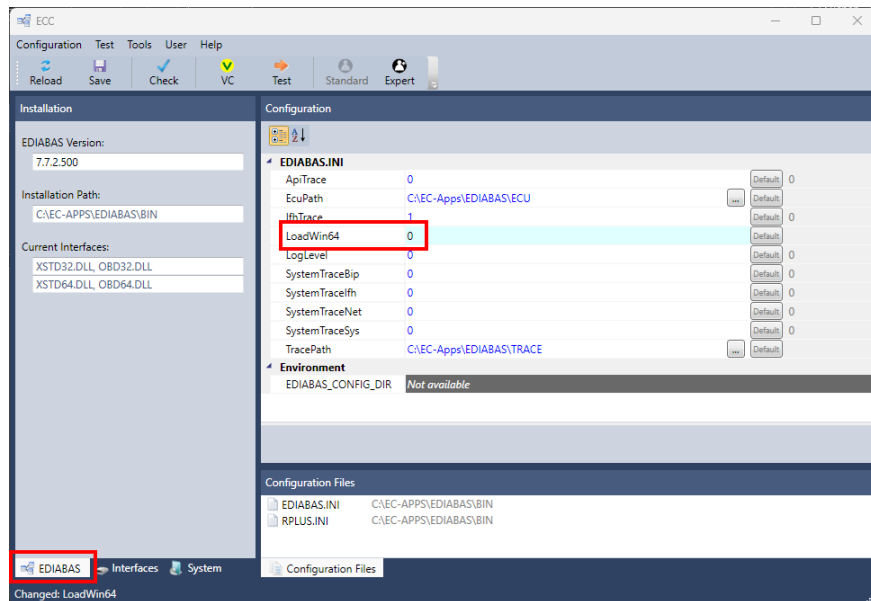

Set right USB-Port from your DCAN-USB Cable in C:\EC-APPS\EDIABAS\BIN\obd.ini

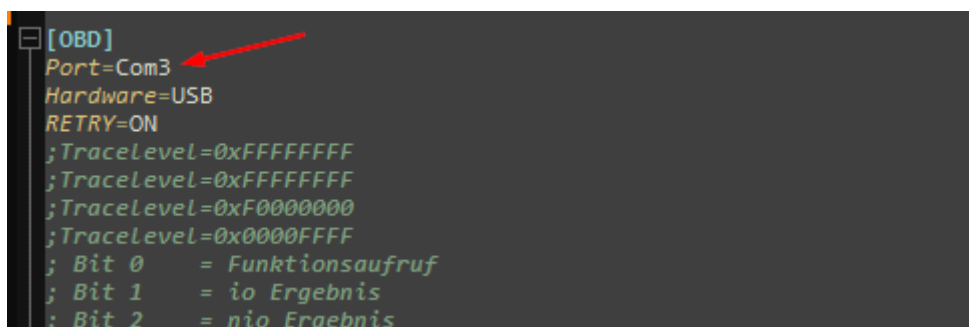

Don't forget set Latency in Device Manager to 1ms